

Interior Hardwood Grille Application Guide

for Andersen® Narroline® Double-Hung and Circle Top™ Windows



Thank you for choosing Andersen.

For questions call 1-888-888-7020 Monday - Friday, 7 a.m. to 7 p.m. and Saturday, 8 a.m. to 4 p.m. central time. For more information and/or guides visit andersenwindows.com.

Please leave this guide with building owner.

► **Read guide from beginning to end before starting installation. Read all warnings and cautions during unit installation.**

⚠ WARNING

Use caution when working at elevated heights and around unit openings. Follow manufacturers' instructions for ladders and/or scaffolding. Failure to do so may result in injury or death.

⚠ WARNING

Follow manufacturers' instructions for hand or power tools. Always wear safety glasses. Failure to do so may result in injury and/or product damage.

⚠ WARNING

Windows and doors can be heavy. Use safe lifting techniques and a reasonable number of people with enough strength to lift, carry and install window and door products to avoid injury and/or product damage.

Parts Included


- (1) Instruction Guide
- (1) Interior Hardwood Grille

Tools Required

- Large Nail Set
- Drill
- 1/8" Drill Bit

1. Remove Center of Grommets

- Punch out or drill center of all *Grommets* located around sash using a large nail set or a 1/8" drill bit.
- Remove any rough edges from center of *Grommets* to ensure proper fit of plunger.

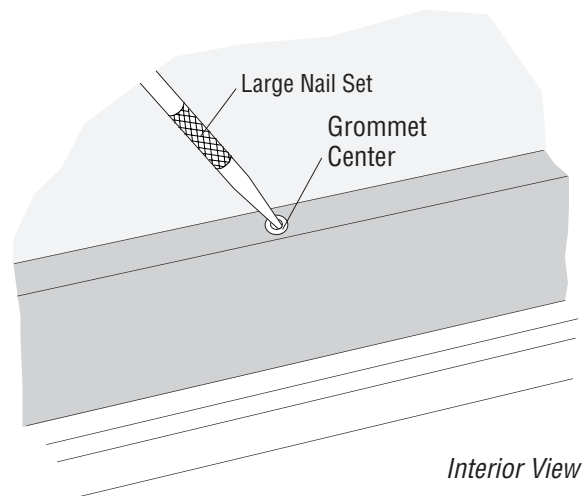

2. Install Interior Hardwood Grille

CAUTION


Depress Grille Plungers slightly to avoid marring sash while installing.

NOTICE


Double-Hung Venting Windows

7/8" and 1-1/8" Interior Hardwood Grilles, for Upper Sash of Tilt-Wash and Narroline® Double-Hung Windows, are notched to allow for free movement of lock and keeper. Position notch to lower rail of Upper Sash.

- Insert *Grille Plungers* into *Grommets* on lower rail. Then, starting at one end and working across upper rail, insert *Grille Plungers* into *Grommets* one at a time. Lastly, insert *Grille Plungers* into *Grommets* on *Stiles*.
- For **Circle Top™ Windows** insert *Grille Plungers* into *Grommets* on *Sill Glass Stop*. Then, starting at one end and working around *Arched Glass Stop*, insert *Grille Plungers* into *Grommets* one at a time.
- To remove grille reverse this procedure.

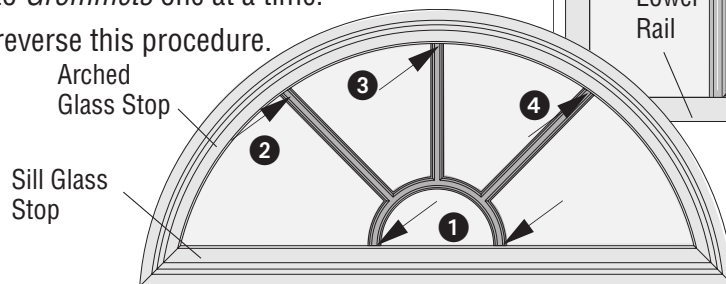

Circle Top™ Window

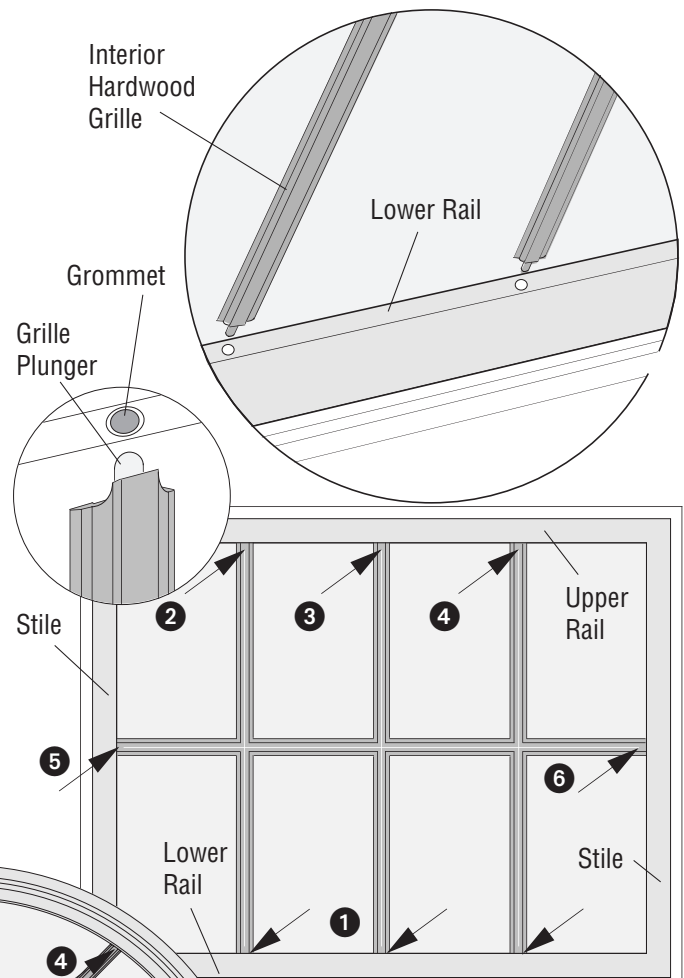

Double-Hung Window

Interior Views

Finishing, Cleaning, and Maintenance Instructions

CAUTION

- **DO NOT** expose unfinished wood to high moisture conditions, excessive heat or humidity. Finish interior wood surfaces immediately after installation. Unfinished wood surfaces will discolor, deteriorate and/or may bow and split.
- **DO NOT** stain or paint weatherstrip, silicone beads, vinyl, glass or hardware.

INTERIOR FINISHING

Remove Interior Hardwood Grilles from unit. Read and follow finishing manufacturer's instructions and warnings on each container of finish material for priming, painting, staining and varnishing.

MAINTENANCE

Immediately sand and refinish any interior wood that becomes stained or mildewed to prevent further discoloration and/or damage. For further information, contact your local Andersen dealer. Dealers can be found in the Yellow Pages under Windows.